


General Guidelines:

1. Ideally, all brackets should be in line, centered under frame rails.
2. Chassis brackets (lower fishmouth) fit main hoop cross member.
3. Stainless tubes may need to be shortened (top or bottom or both).
4. Middle of three lower housing holes can accept cross tube to tie rear end housing to brackets.
5. Make sure all bracket holes are drilled with appropriately sized bit so they accept your fasteners!
6. Center portion of rear end housing may need to be narrowed to permit housing brackets to have proper width/spacing (See #1)

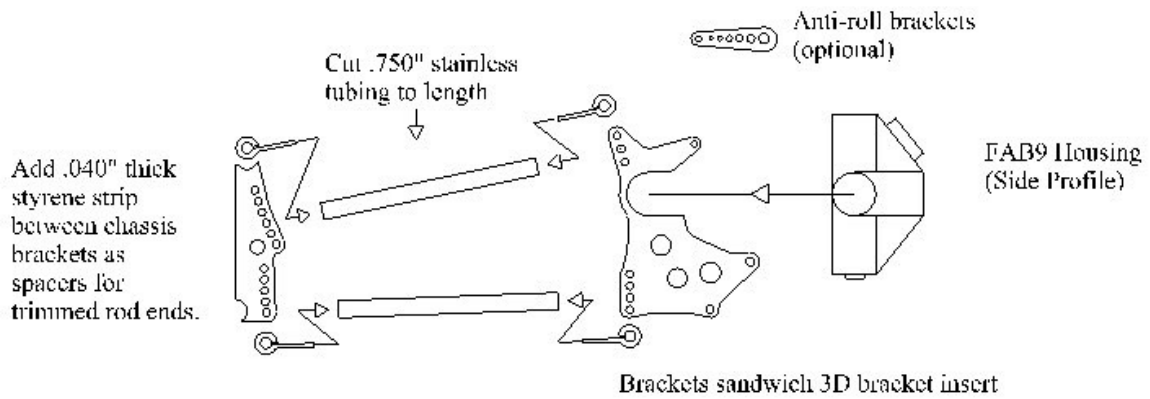

Formed Wire Rod Ends

Cut off  Save