



flush with

After bend, fit slot over rotor and bend 90-

Caliper bracket/strut body orientation

Grasp bracket so edge of pliers are
outer edge of rotor slot

degrees



rotor face.


Be careful not distort bracket by bending over

Example of bracket after 90-degree bend

Fit slot over rotor. Clamp against
Rotor must be against outer edges.

See arrows.

Nose of pliers. See arrow

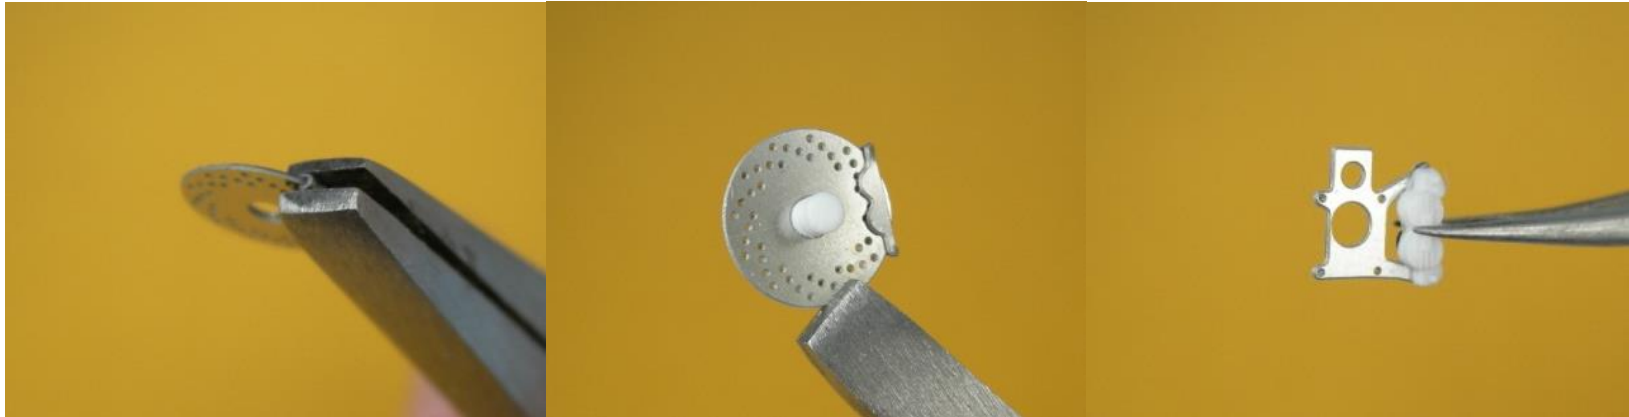

installation on strut body

Proper orientation of calipers when mounted to bracket

Fold bracket over rotor 180-degrees and crimp

Bracket fitted to rotor before

VERY IMPORTANT. Remember your caliper brackets must be folded as mirror images of each other. Be sure vent holes match side to side!

